


How To Wire UBEC:

(3 Amp & 5 Amp UBEC)

When ESC Has NO BEC Function:

- ◆ No modification of the ESC wiring is needed.
- ◆ Simply connect the input cables of the UBEC with the battery and plug the UBEC's output cable (connector) into a spare channel of the receiver.

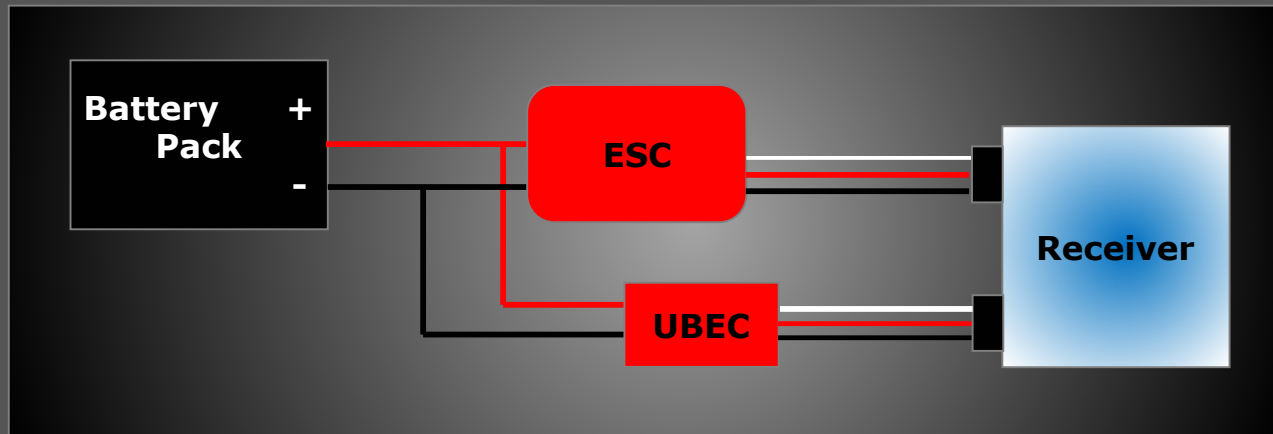

When ESC HAS BEC Function:

- ◆ Disable the BEC function of the ESC. This can be done by using a pair of wire cutters to remove a short section of the red wire near the receiver connector and insulate the cut wire with a bit of electrical tape.

